

Linksys WRT160NL

Modified on: Fri, 20 Feb, 2015 at 10:11 AM

Please connect an Ethernet cable from your existing router/network in to the port labelled "**Internet**" on the back of the Linksys.

Please connect an Ethernet cable between port 1 on the back of the Linksys and your computer.



Turn on the router and wait for a few minutes.

Open a web browser and type **http://192.168.1.1** in to the address bar.


You will be prompted to log-in. The default username is "**admin**" and the password is "**admin**" (unless you have changed these).



Click on "**Administration**" on the top menu

Click "**Firmware Upgrade**" on the menu below.

Click "**Browse**" and select the firmware file that you have been provided.

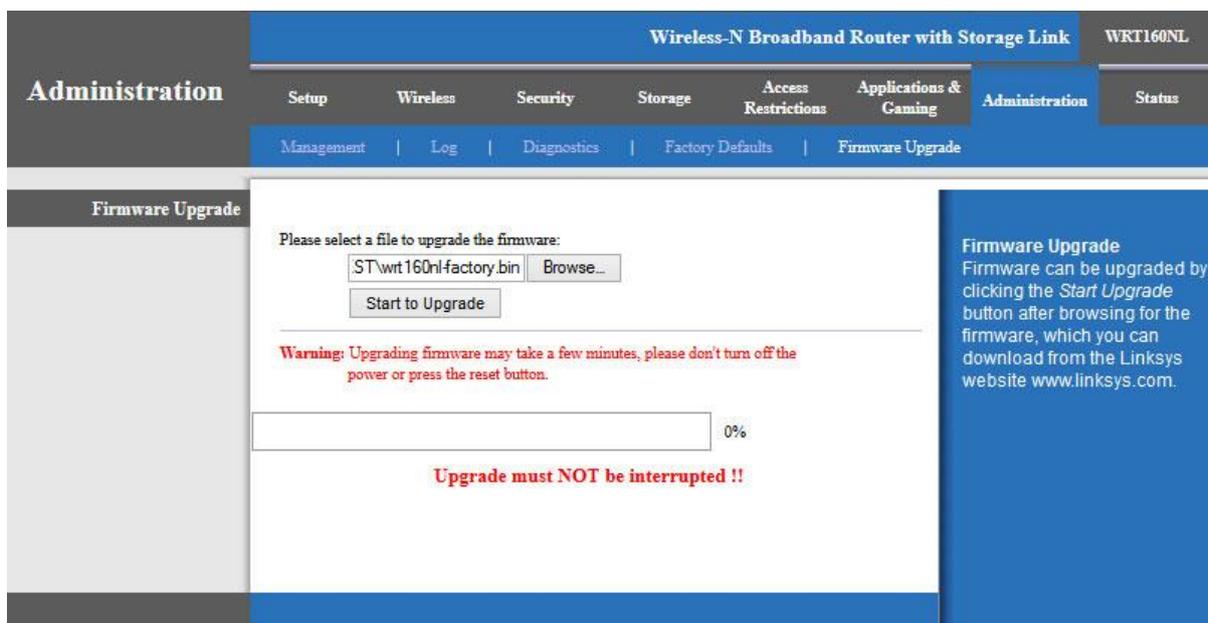

Click "**Start to Upgrade**" and press "**OK**" to confirm.

Wireless-N Broadband Router with Storage Link WRT160NL

Administration

Setup Wireless Security Storage Access Restrictions Applications & Gaming Administration Status

Management | Log | Diagnostics | Factory Defaults | Firmware Upgrade

Firmware Upgrade

Please select a file to upgrade the firmware:

ST\wrt160nl-factory.bin Browse...

Start to Upgrade

Warning: Upgrading firmware may take a few minutes, please don't turn off the power or press the reset button.

16%

Upgrade must NOT be interrupted !!

Firmware Upgrade
Firmware can be upgraded by clicking the *Start Upgrade* button after browsing for the firmware, which you can download from the Linksys website www.linksys.com.

The upgrade process will now begin and take up to 5 minutes to complete.